


Code

- S** - Solder connector to pot
- S** - Solder outer braid to pot
- S** - Solder outer braid to ground lug
- S** - Solder wire to pot

ES-335 & Les Paul

Vintage style wiring

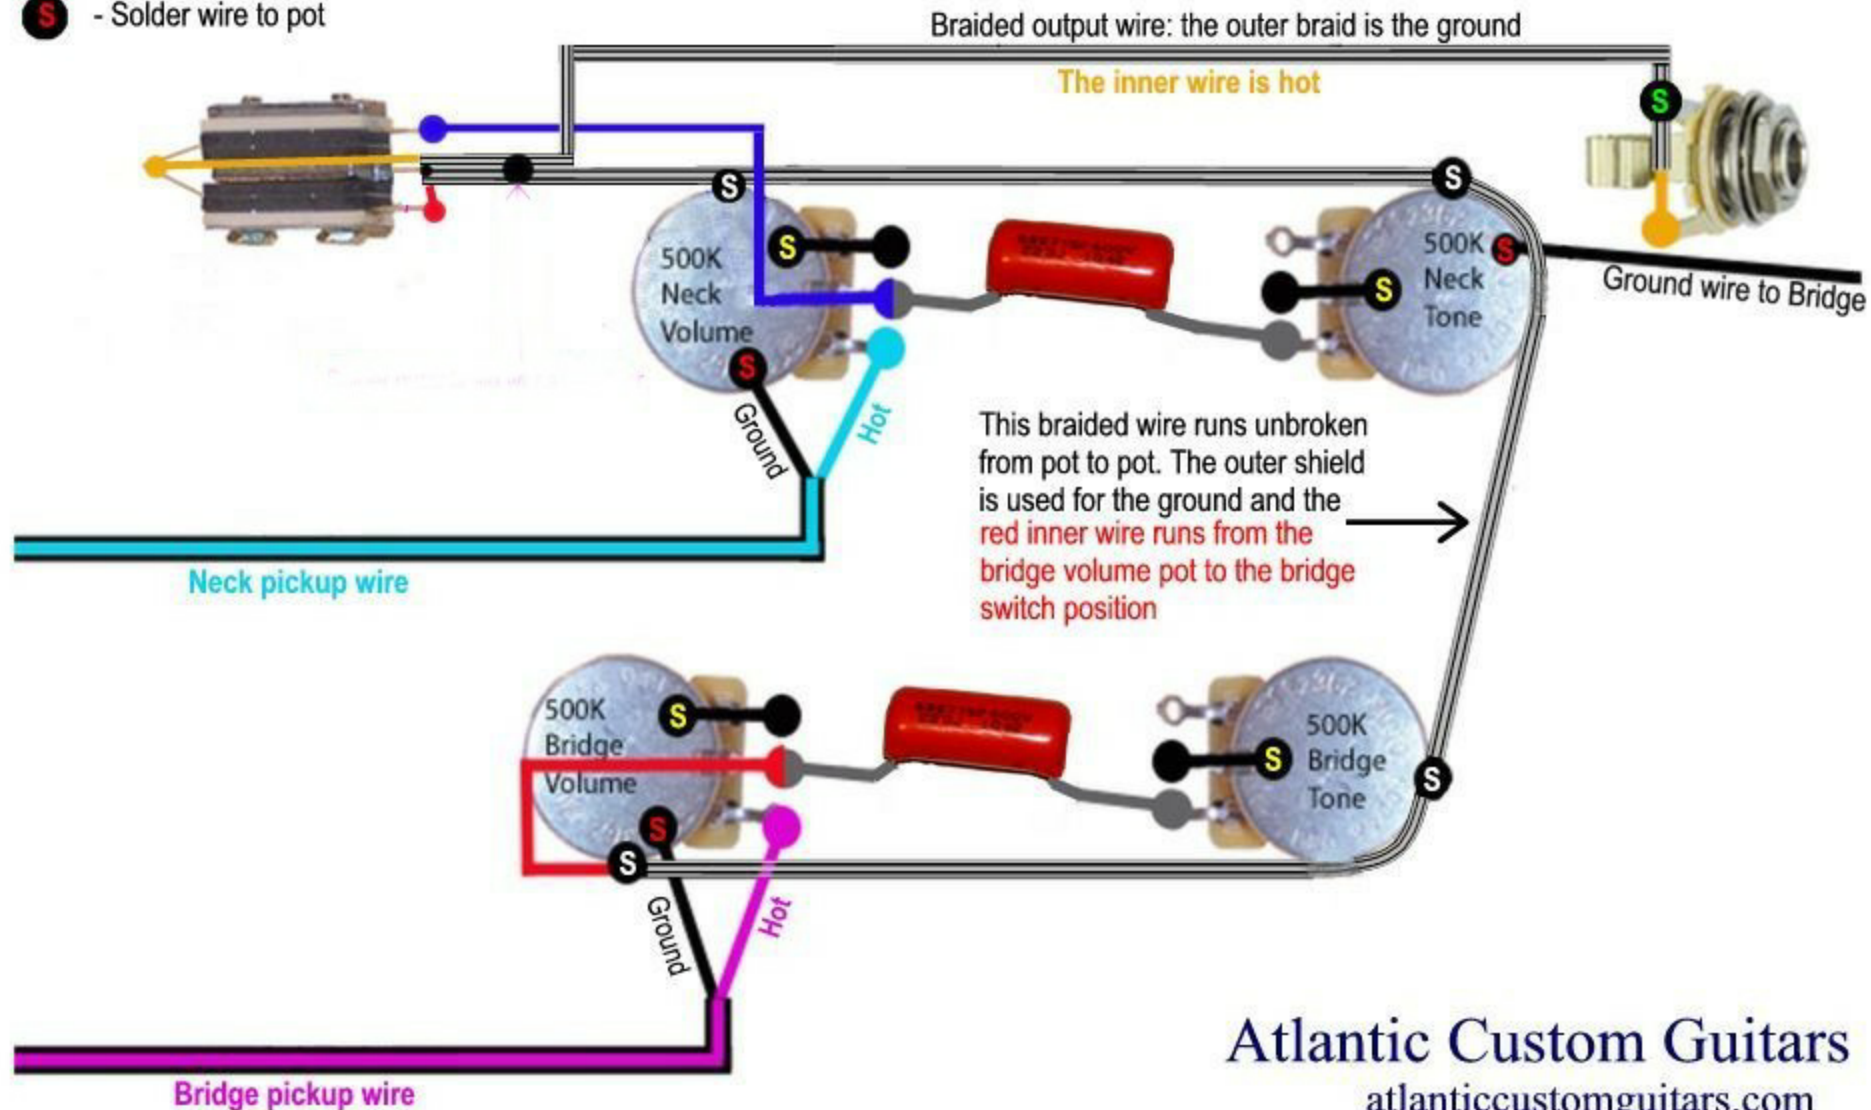

Atlantic Custom Guitars
atlanticcustomguitars.com

This is a standard 1950's Gibson LP and ES wiring diagram.